




FITTING INSTRUCTIONS

BW922 / VFM922

BW922 consists of 2 pairs of pads, which must be arranged correctly in the caliper, as shown in the illustrations below, otherwise the caliper will not close.

UNDER NO CIRCUMSTANCES SHOULD THE CALIPER BE FORCED CLOSED, OR THE PADS / CALIPER STRUCK WITH ANY OBJECT, SUCH AS A HAMMER, AS THIS MAY DAMAGE THE PADS.

1. With the pads held so the notch (A) in the backplate is held uppermost, attach the springs to the pads.

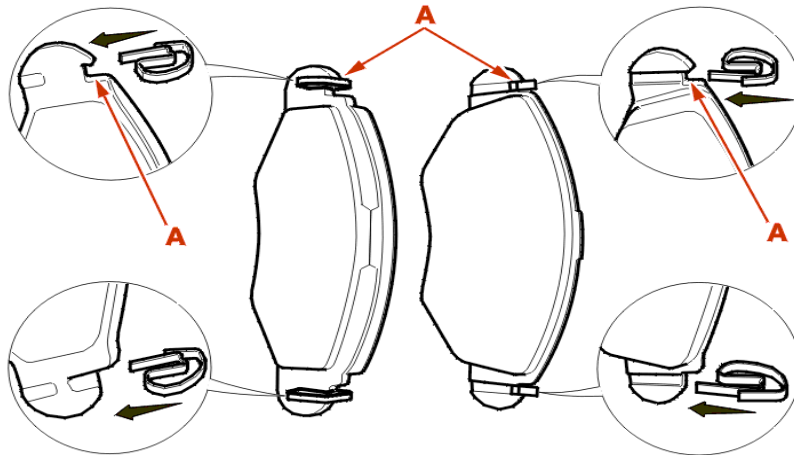

2. Fit the pads, making sure the notch (A) is located in the upper section of the caliper.

