


## FITTING INSTRUCTIONS – BW907

### LAND ROVER FREELANDER Mk1 (2000 – 2006)

#### FRONT BRAKE PADS

If a chamfer is machined into the friction material on one edge only – the pads must be fitted as shown below.

Both pads must be positioned in the caliper with the chamfer uppermost – facing the direction of the disc rotation. (vehicle moving forwards)

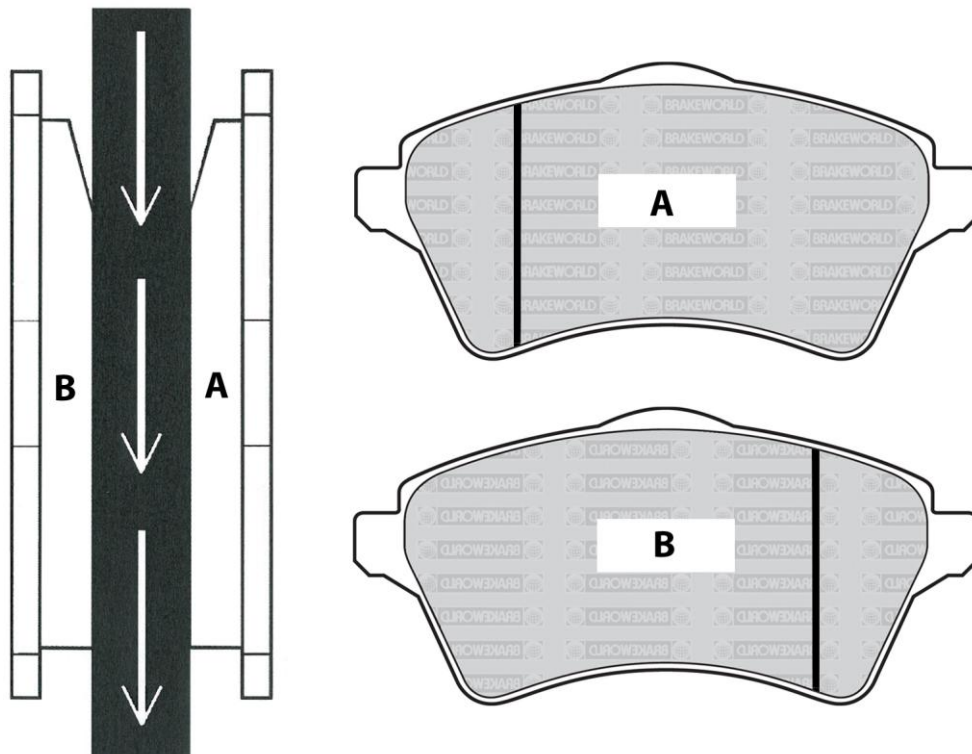

NPH 23/05/12